 





G4 Instant




a

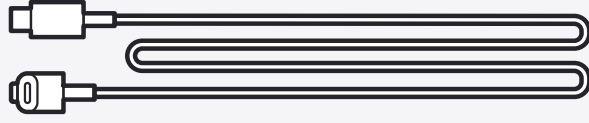

 b

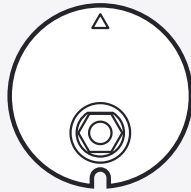

c

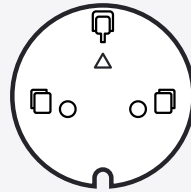 

d



e



 
f



g



h

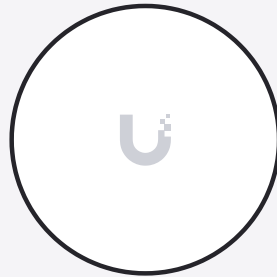



i



j




 
 
k

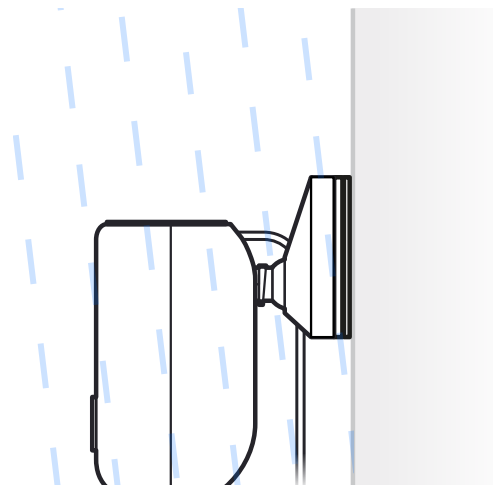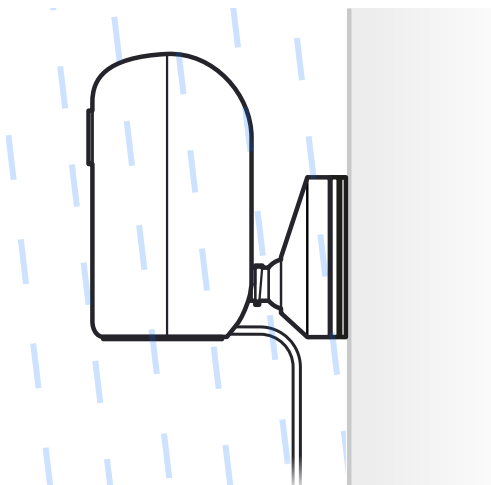


1

   
 
A



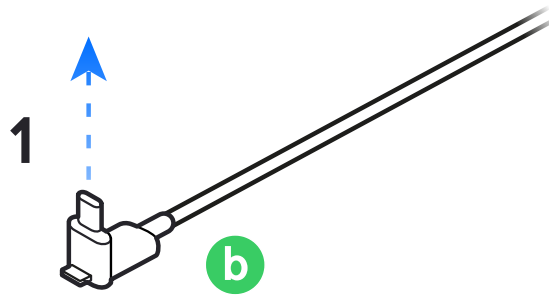
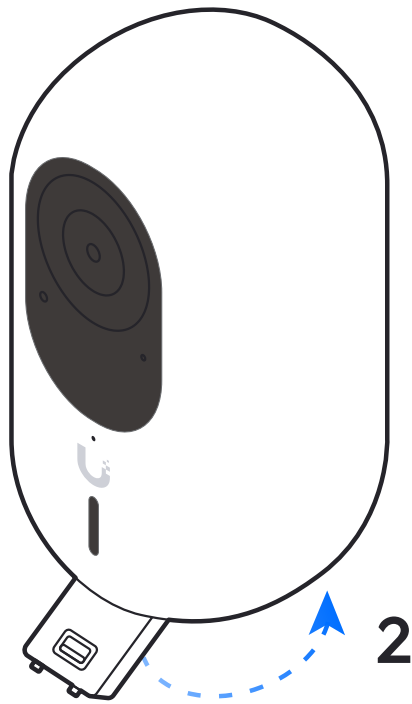
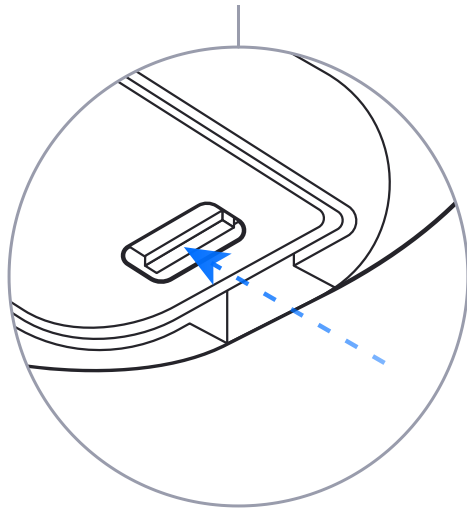





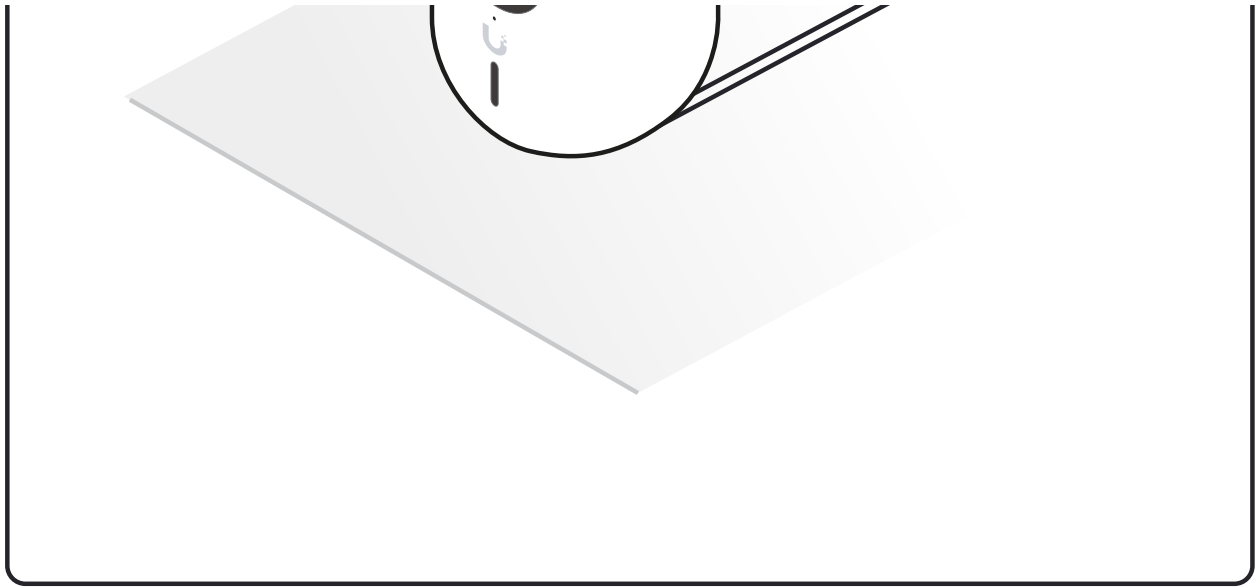



B

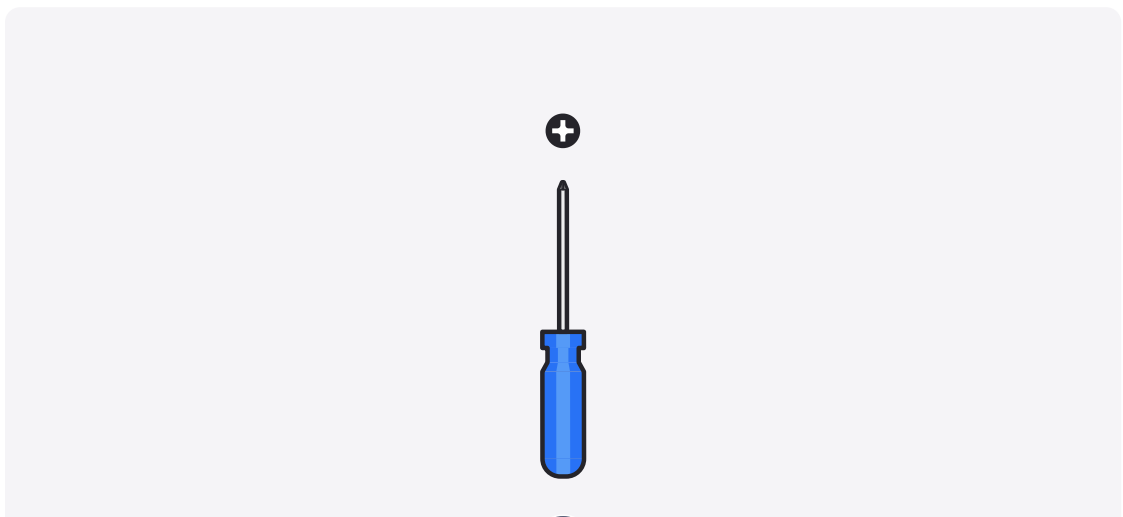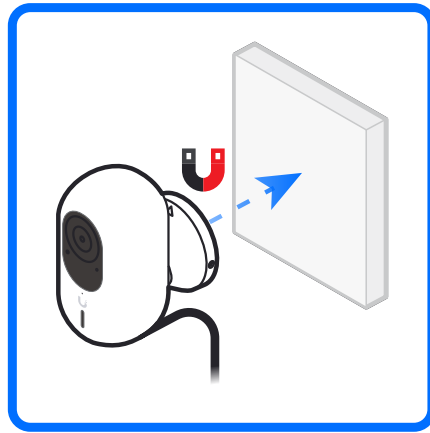  


1

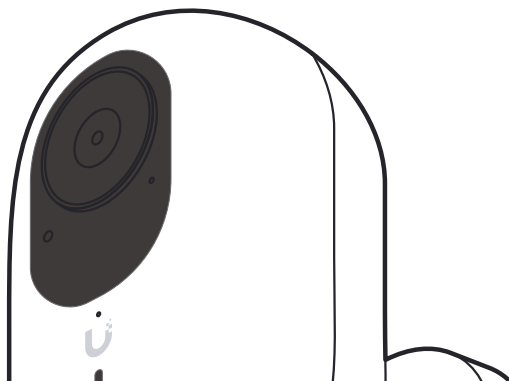 
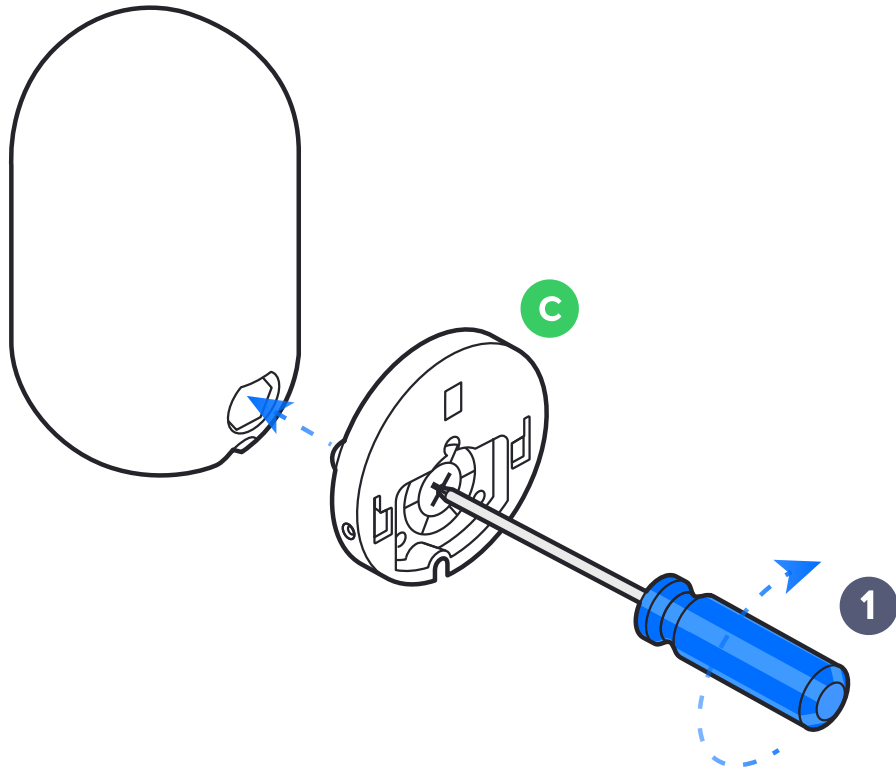 
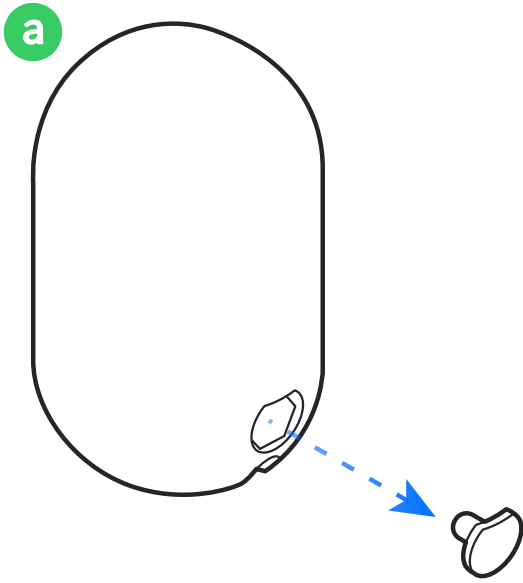 


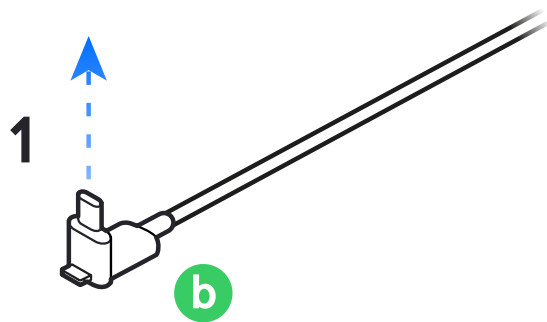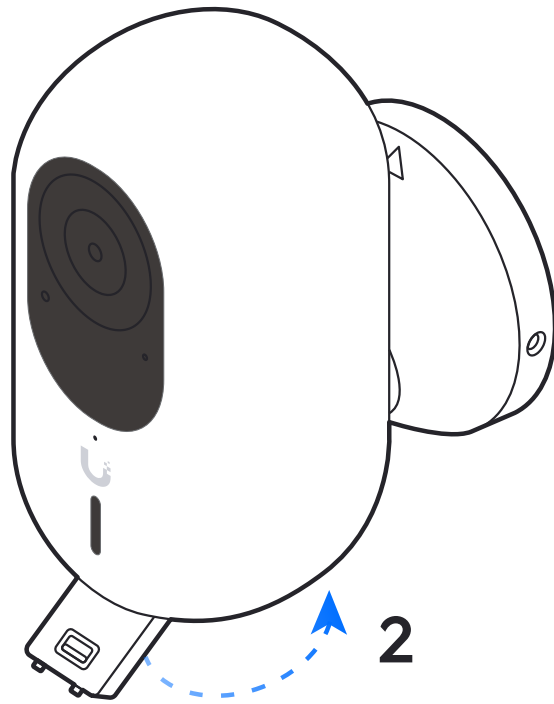  
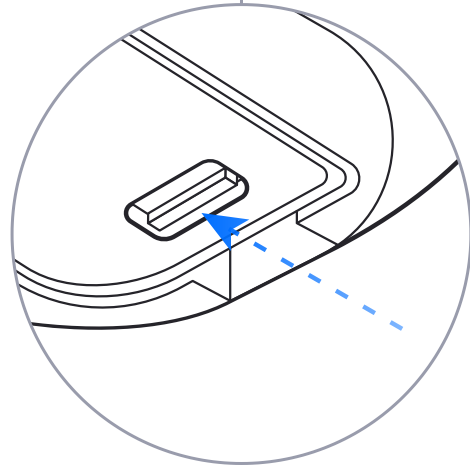 
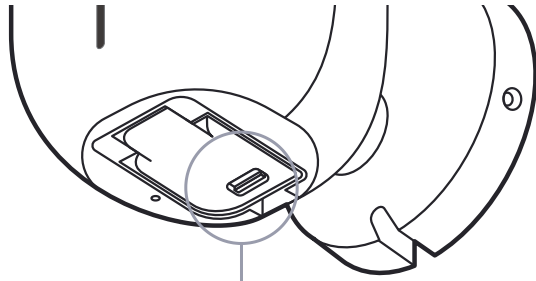 



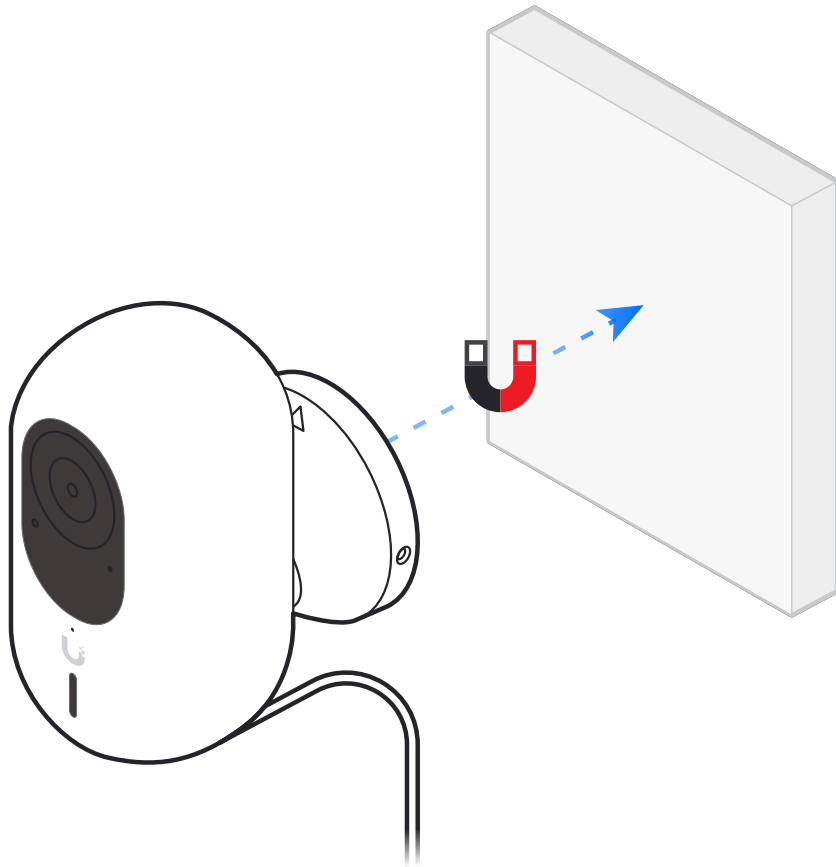 





C

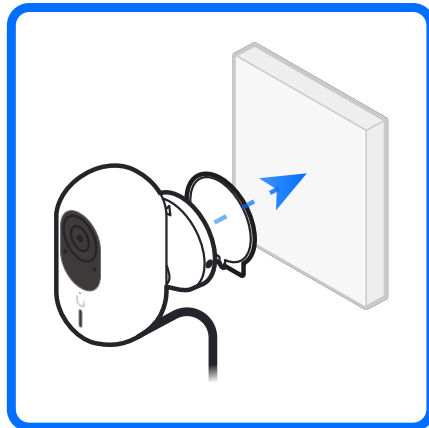 


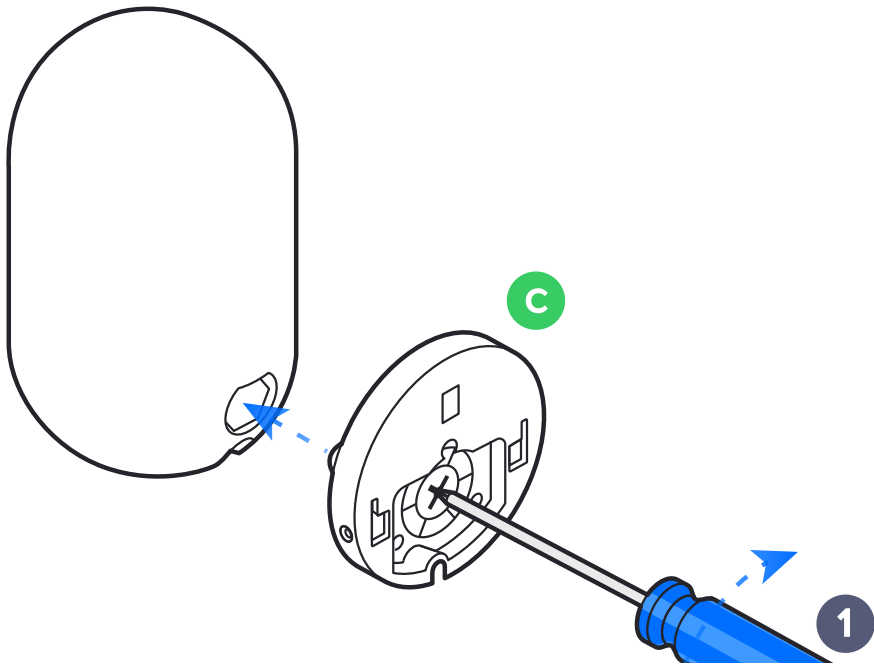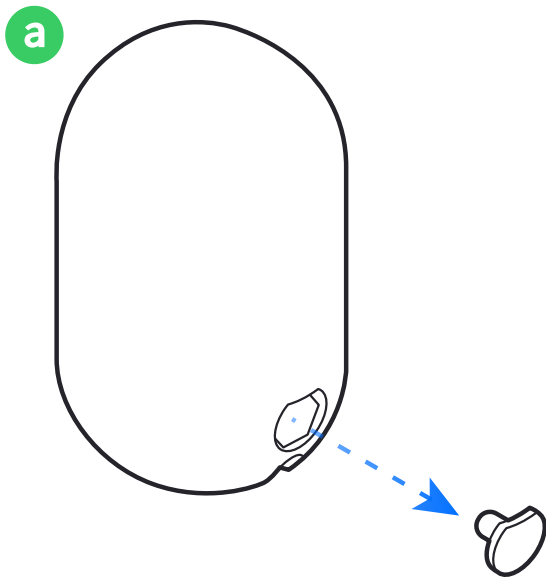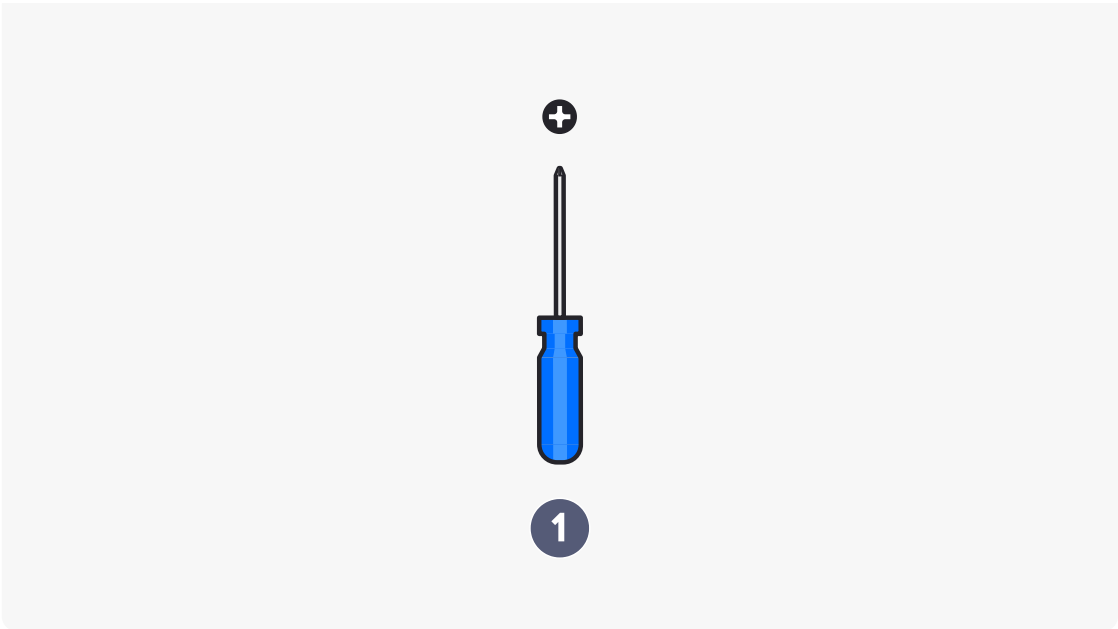   

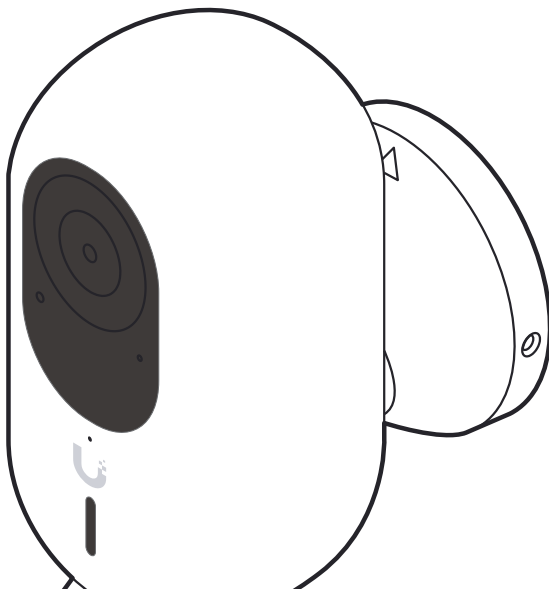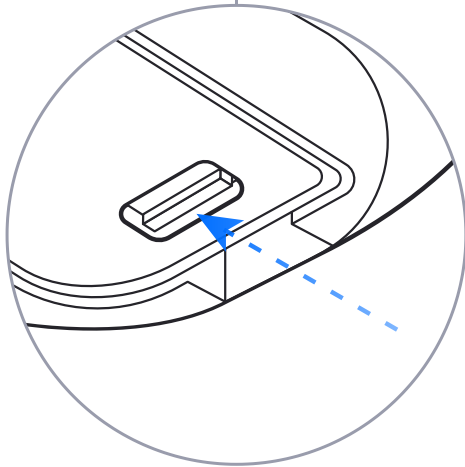  
 



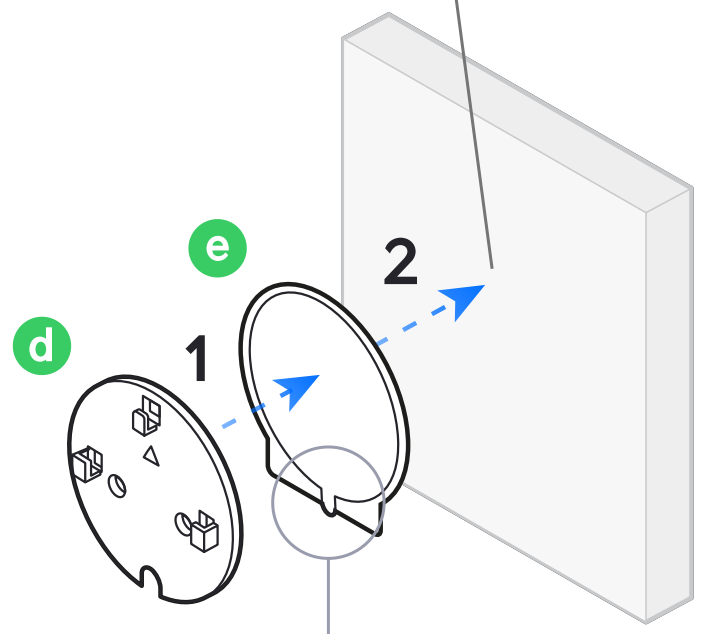 
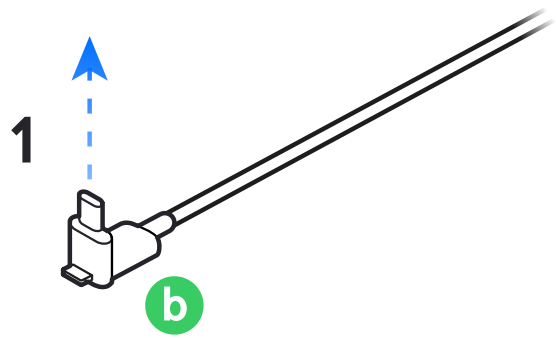 


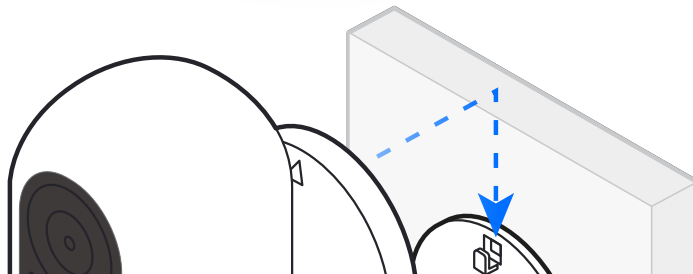  
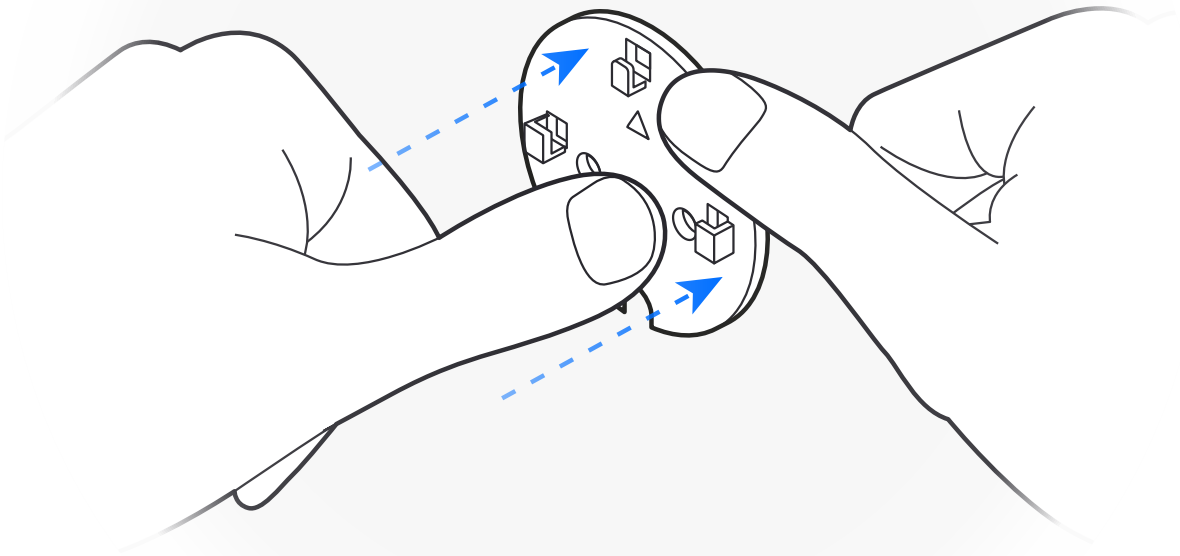 
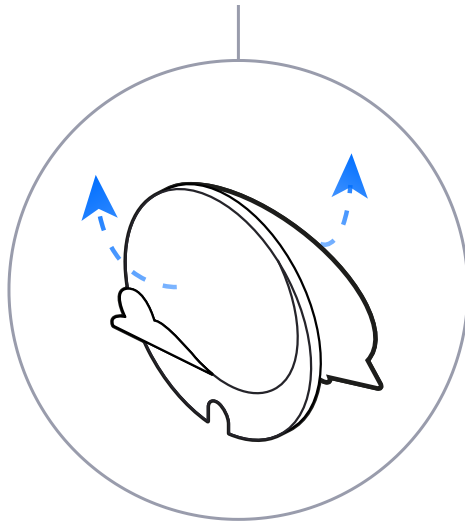 



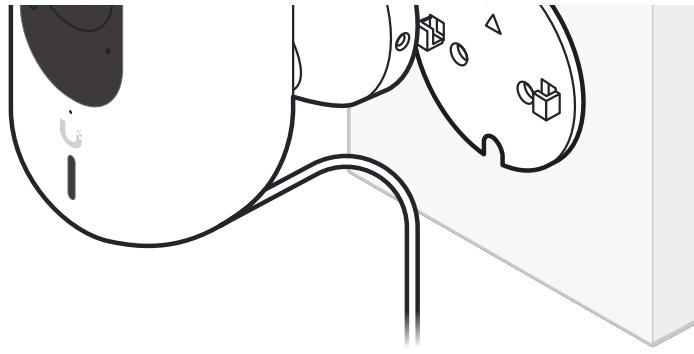





D

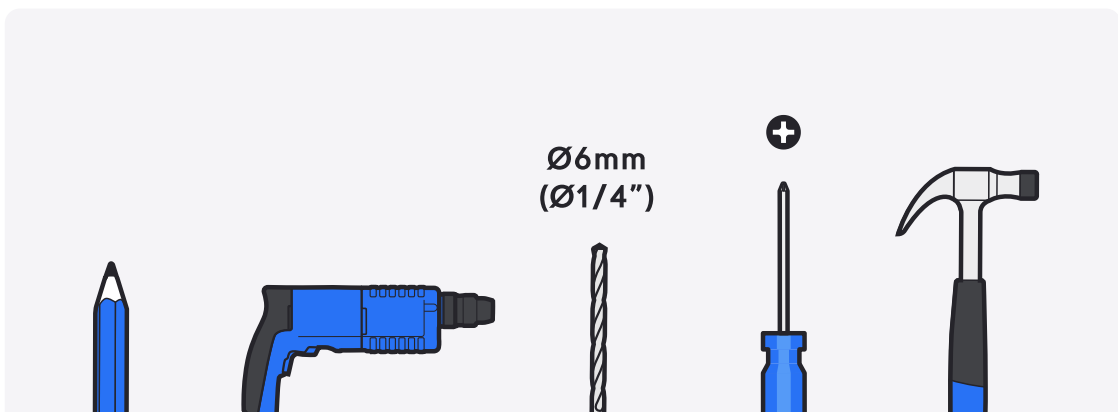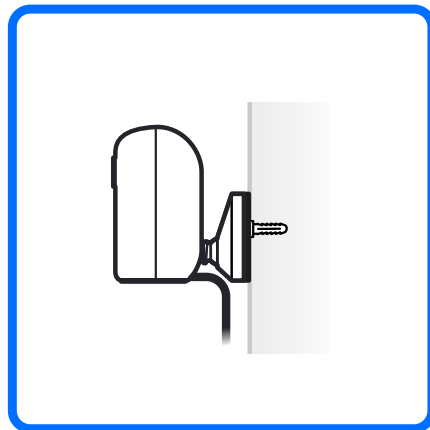  

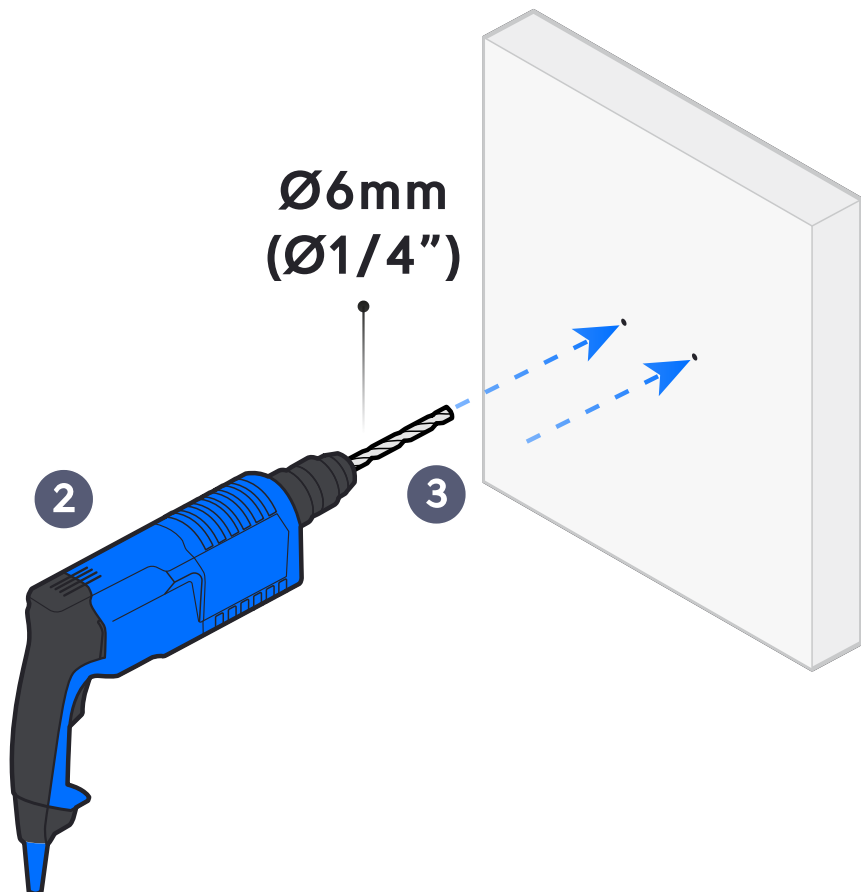 
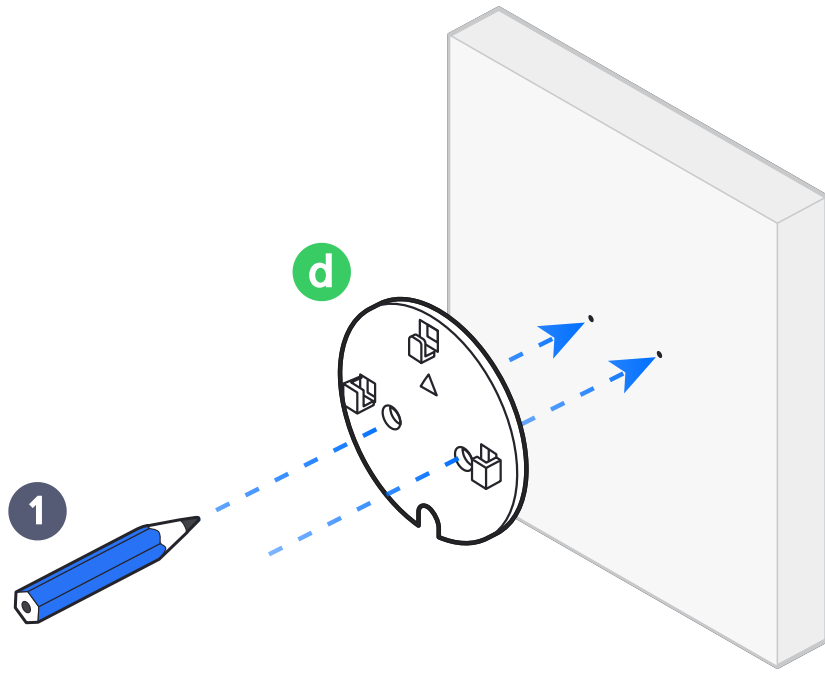 
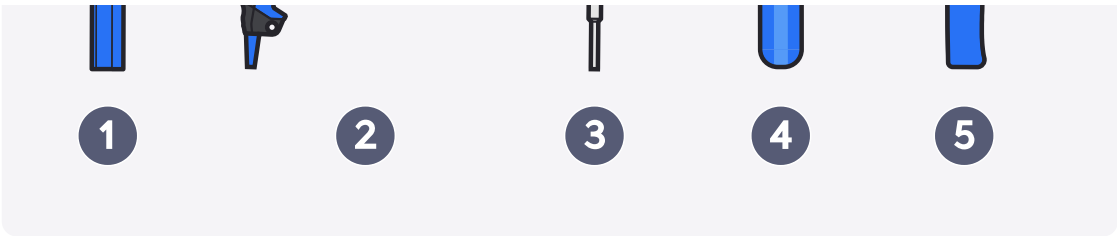 


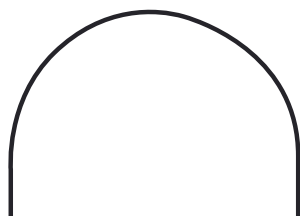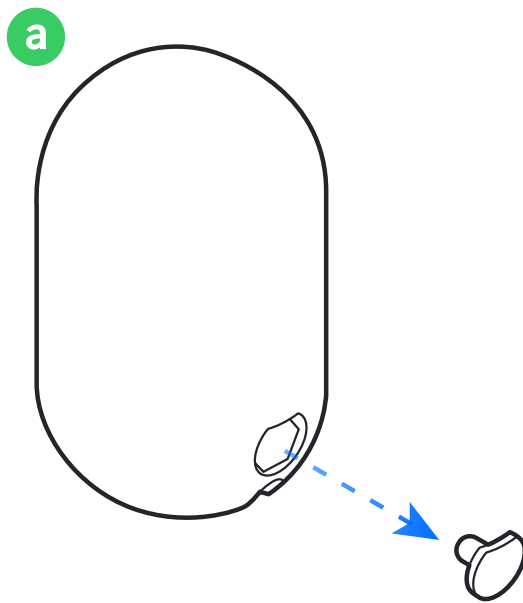  
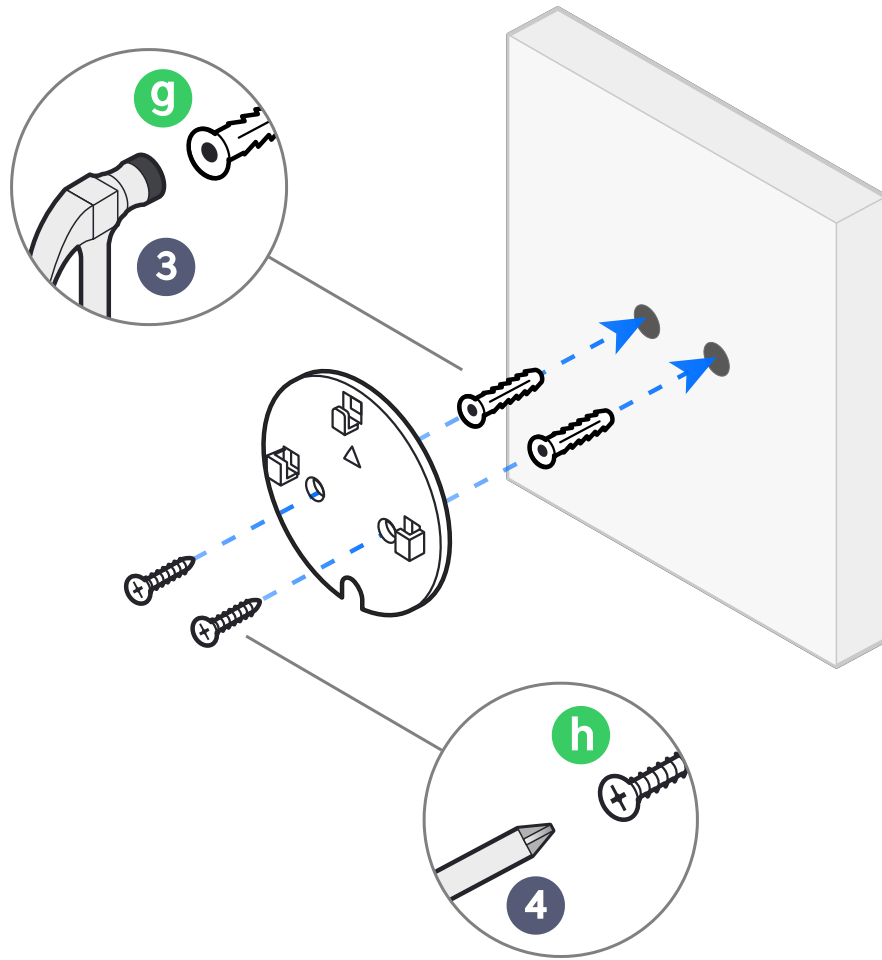 




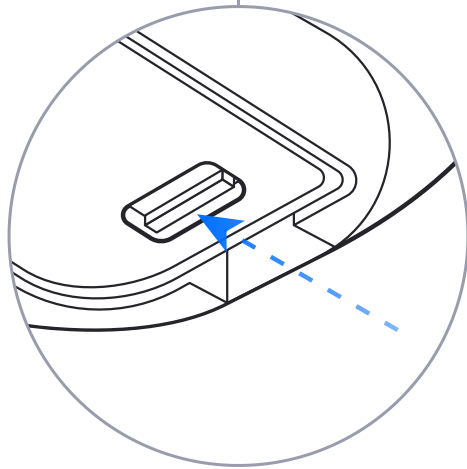 
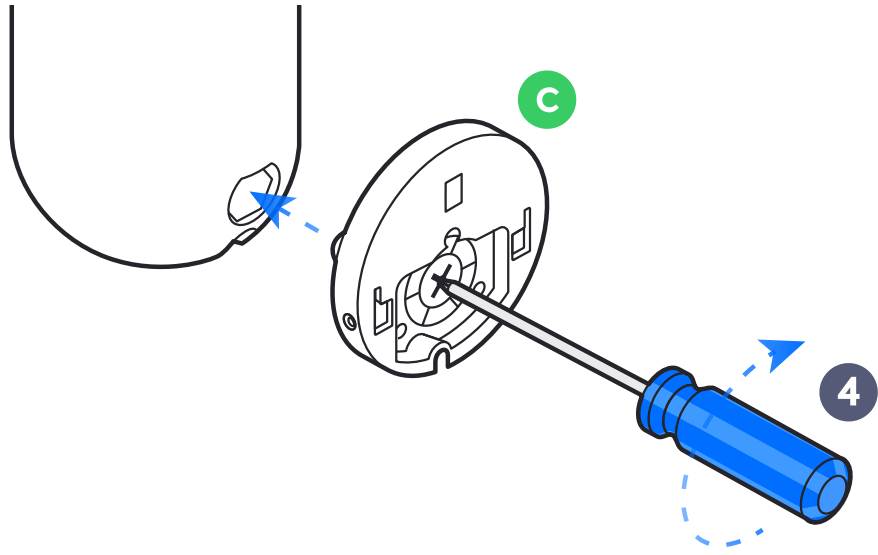 


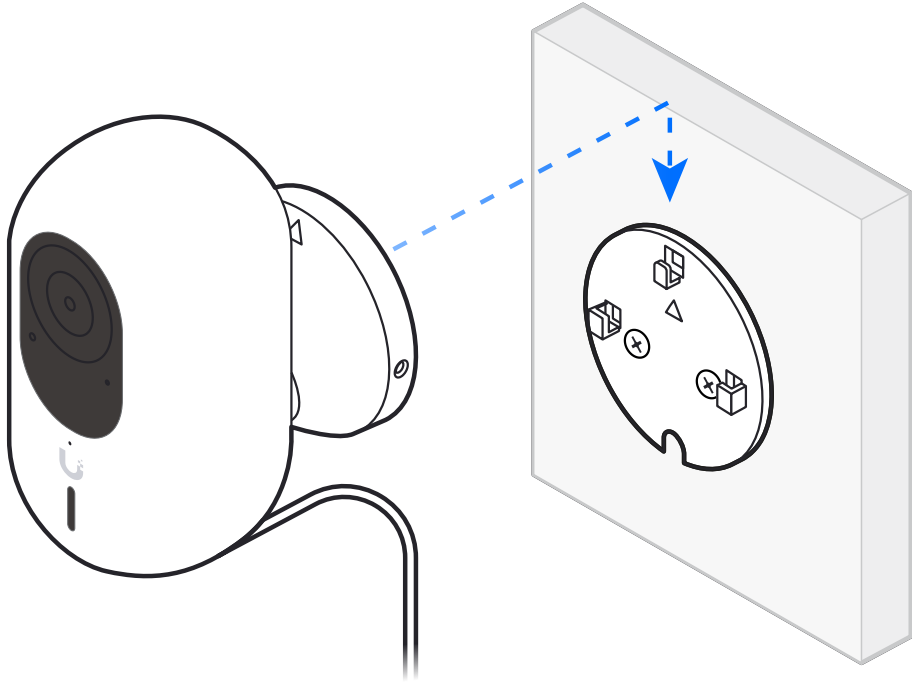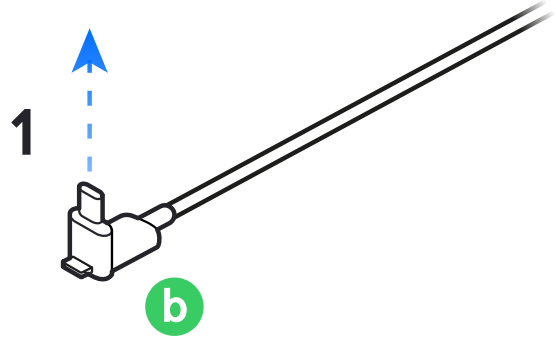  
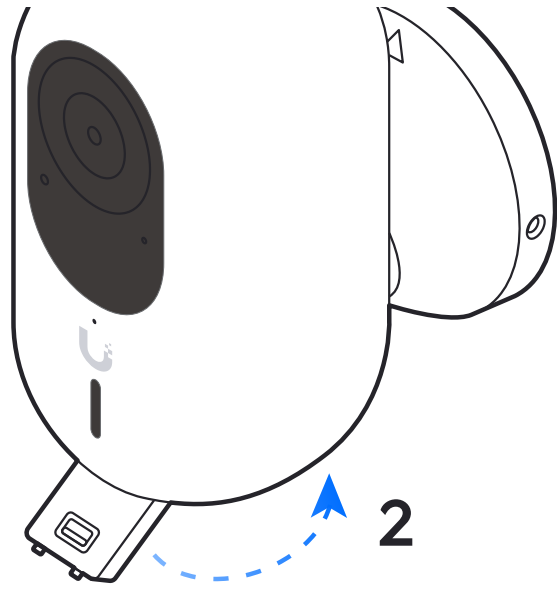 



E

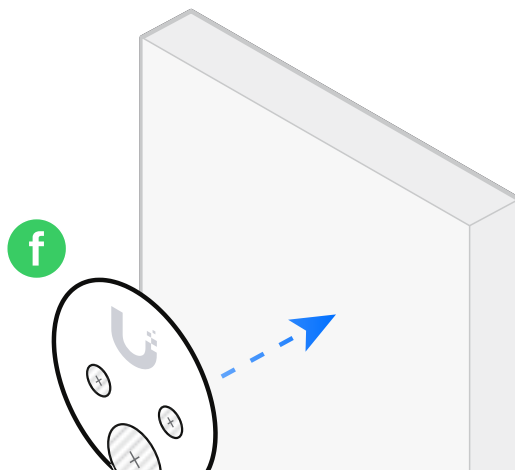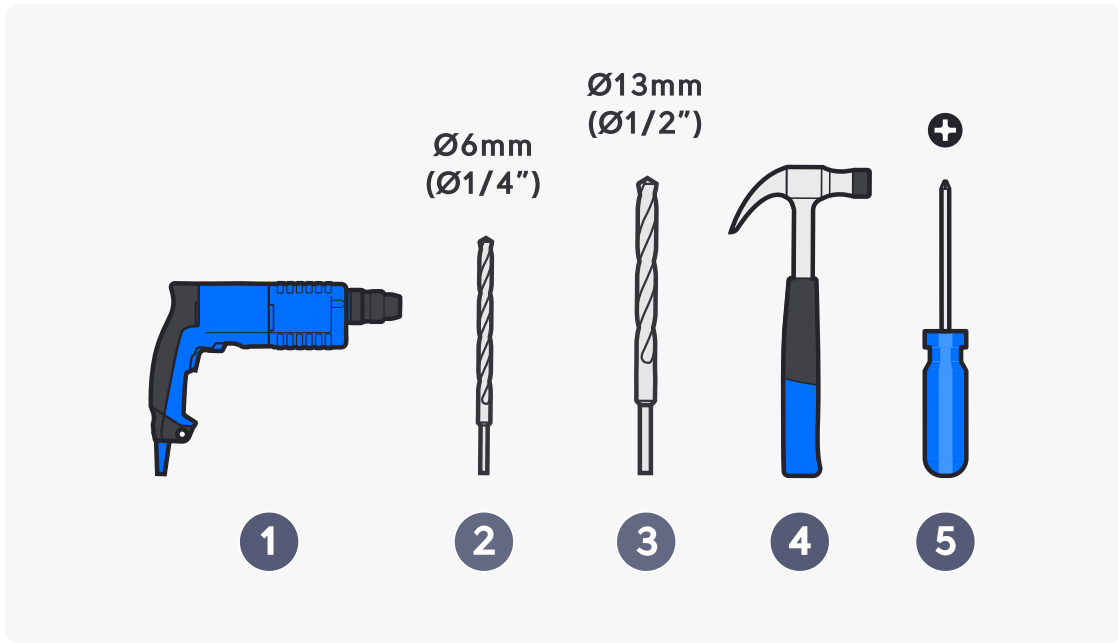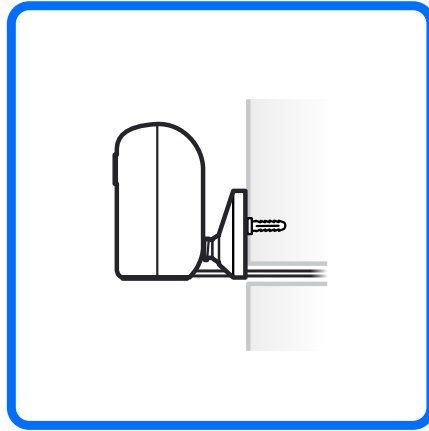   

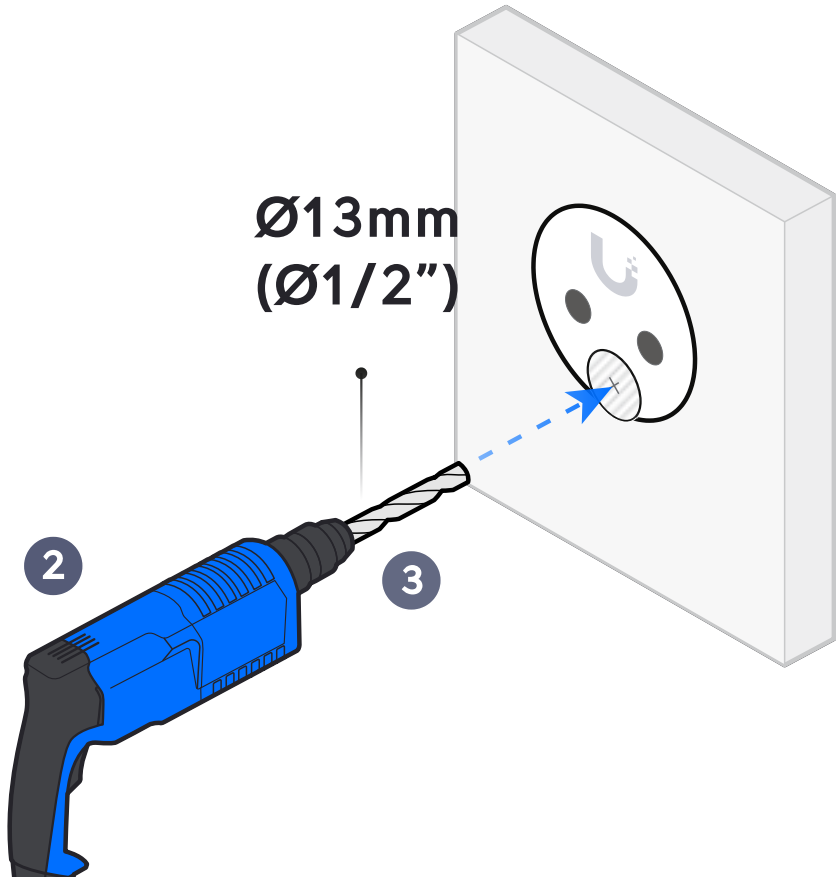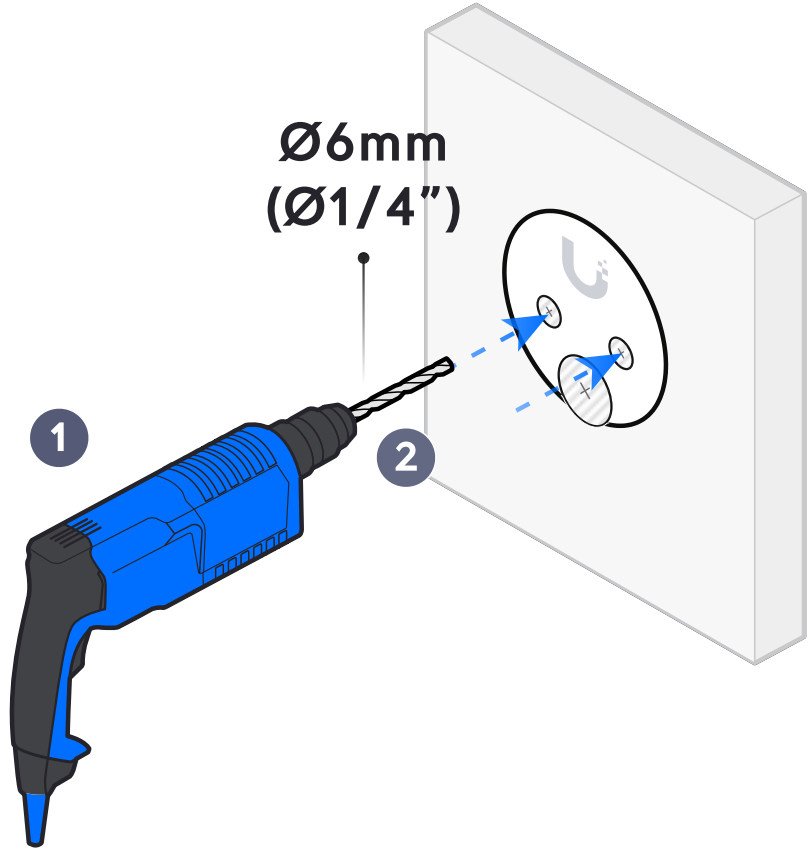  


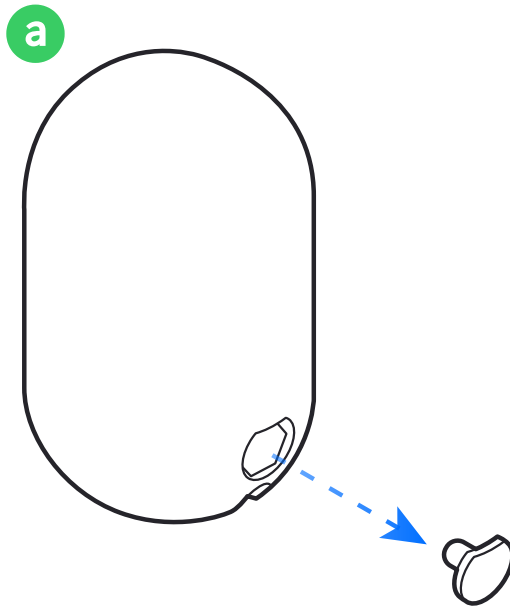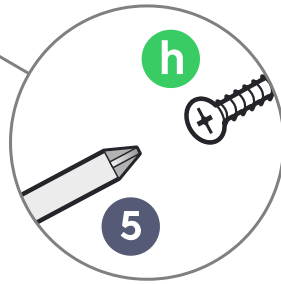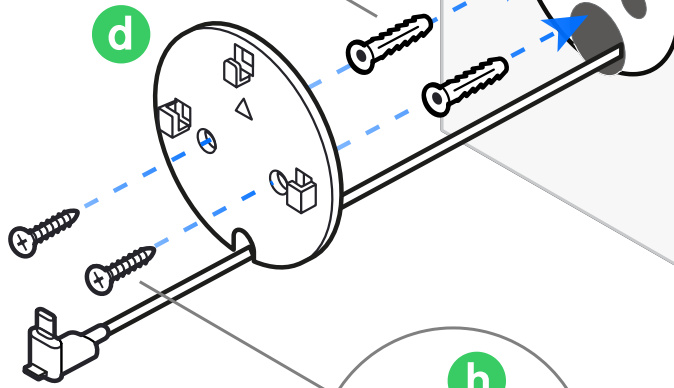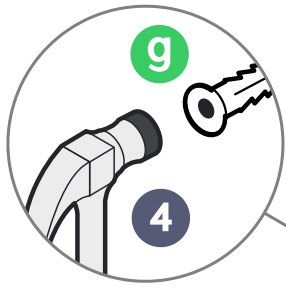    

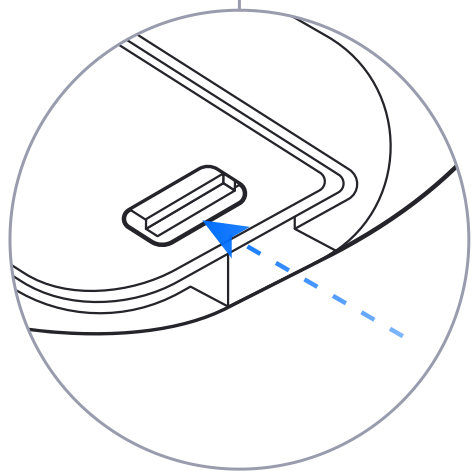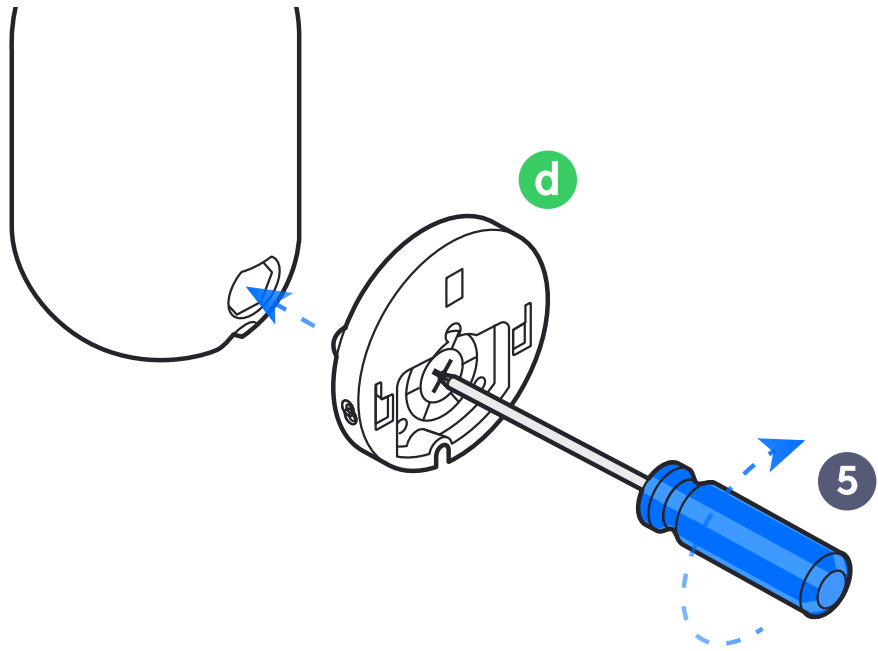  


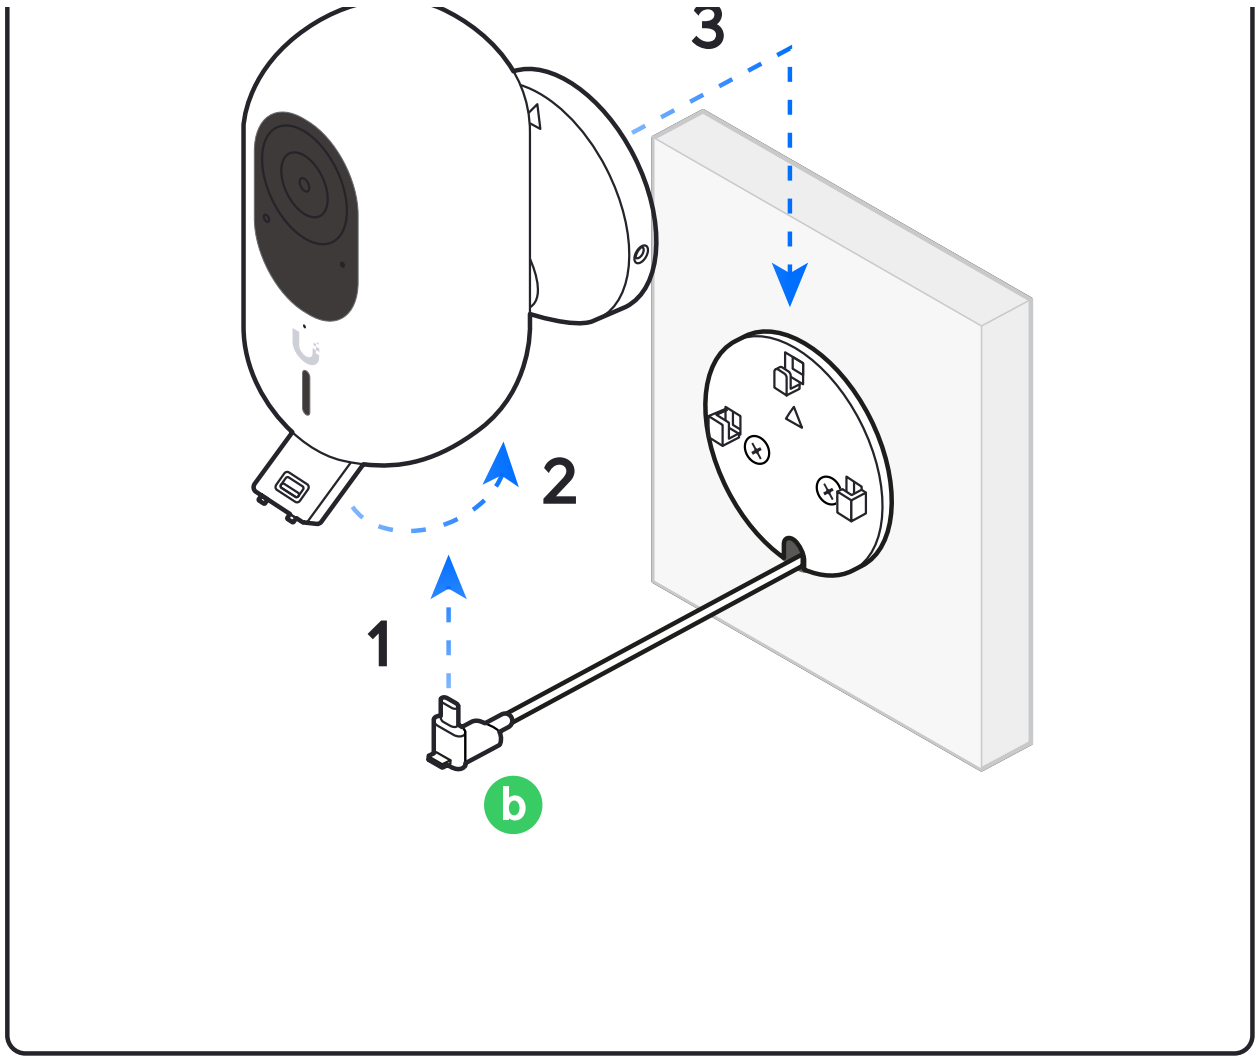 

2

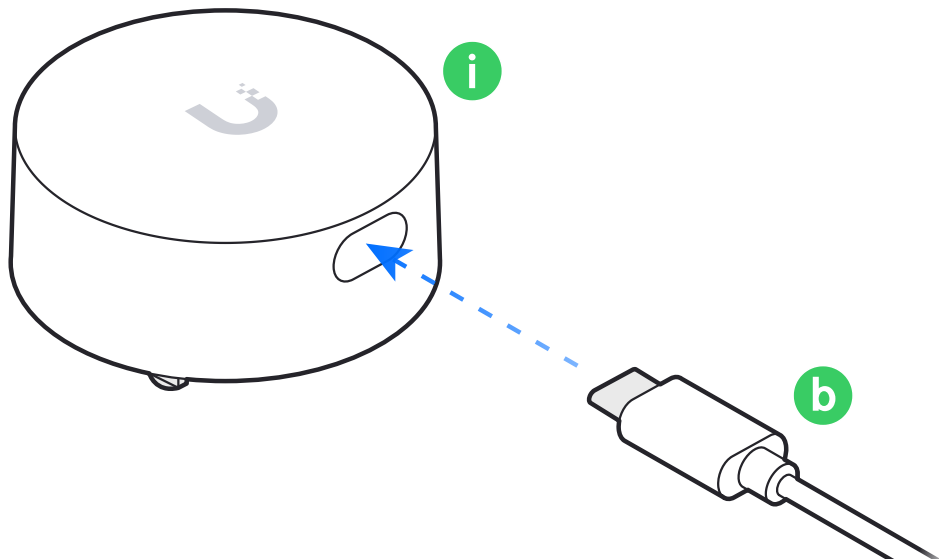 

3

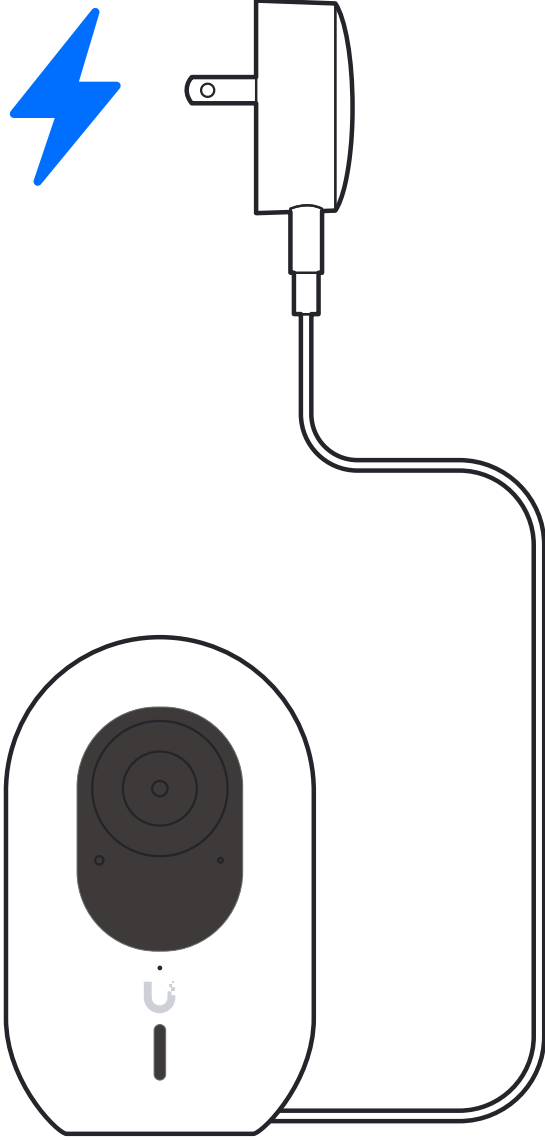 


4






 Internet

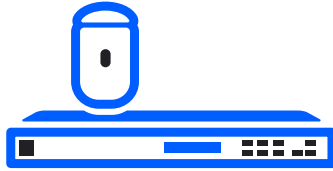

**UniFi Gateway
Console**

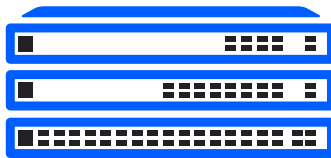 


Switch






 
**UniFi
Access Point**






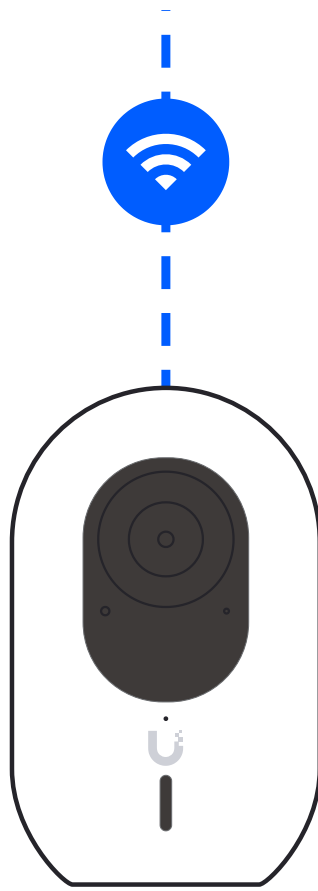


5

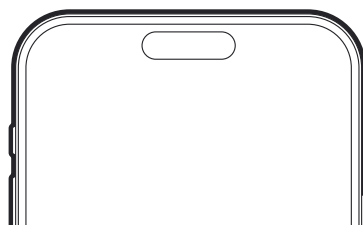 

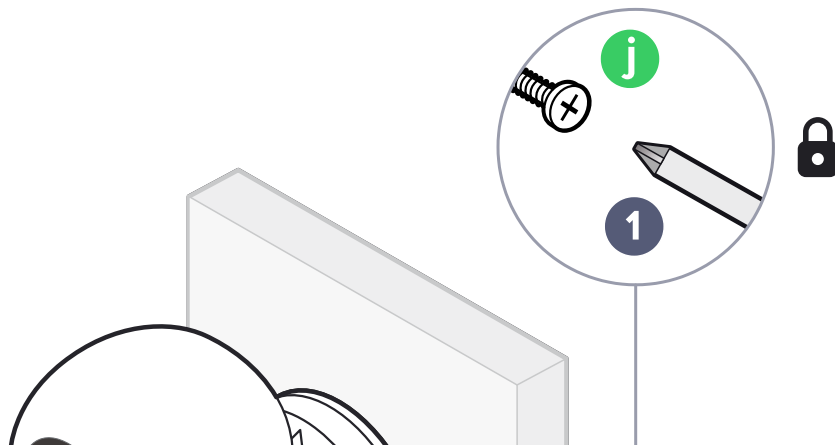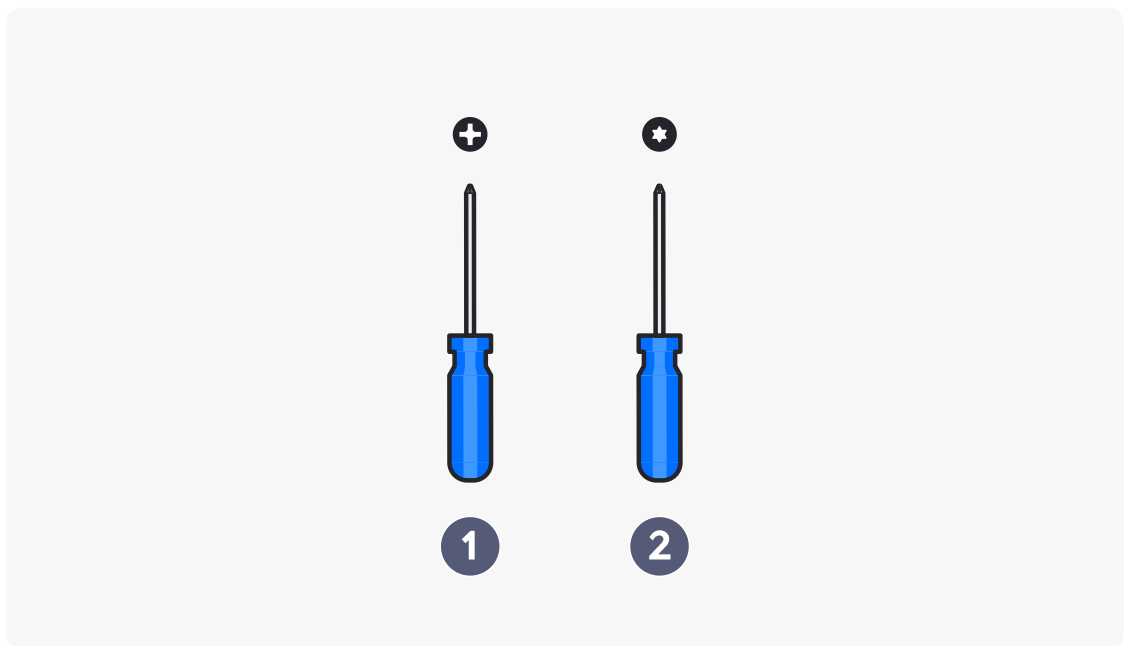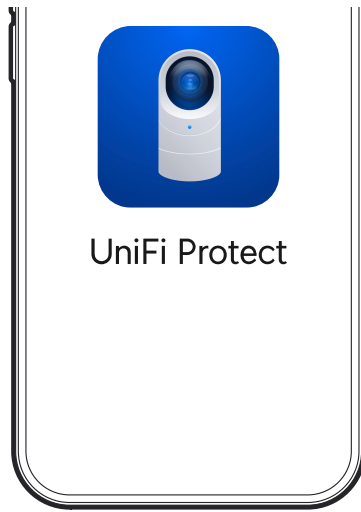   

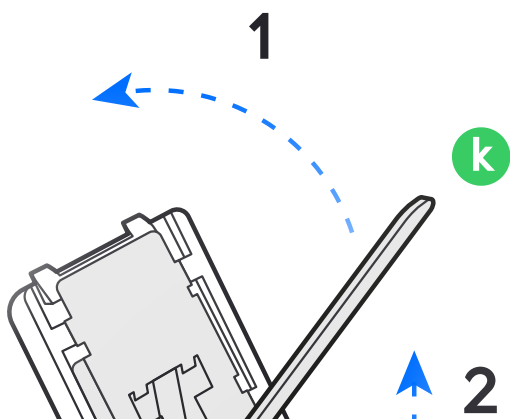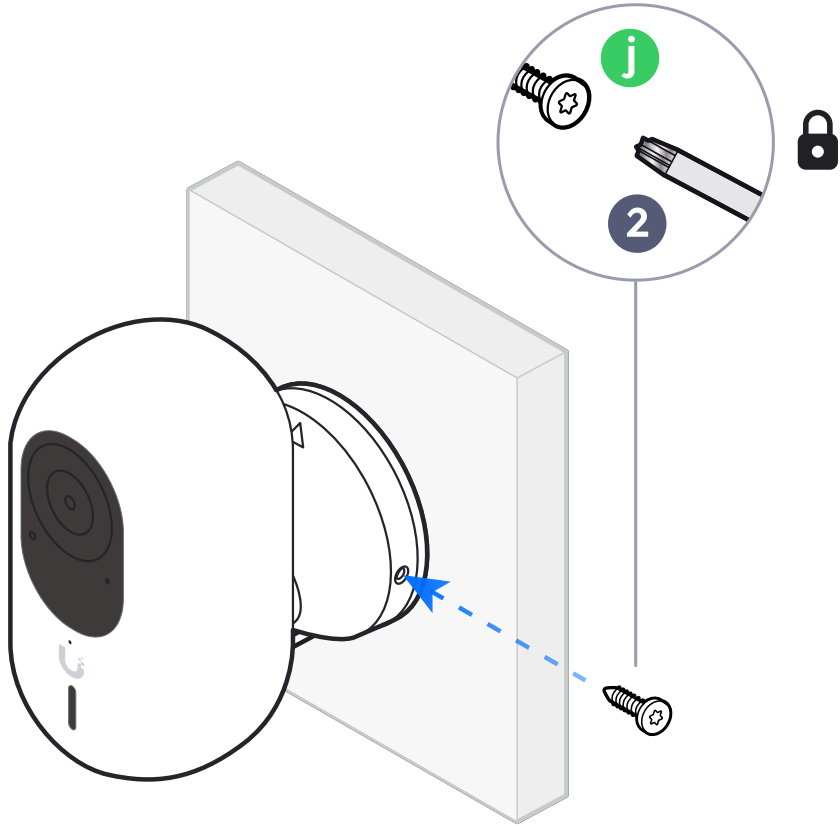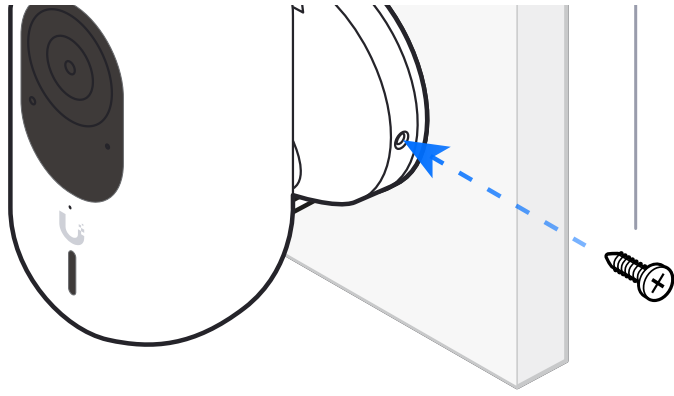   

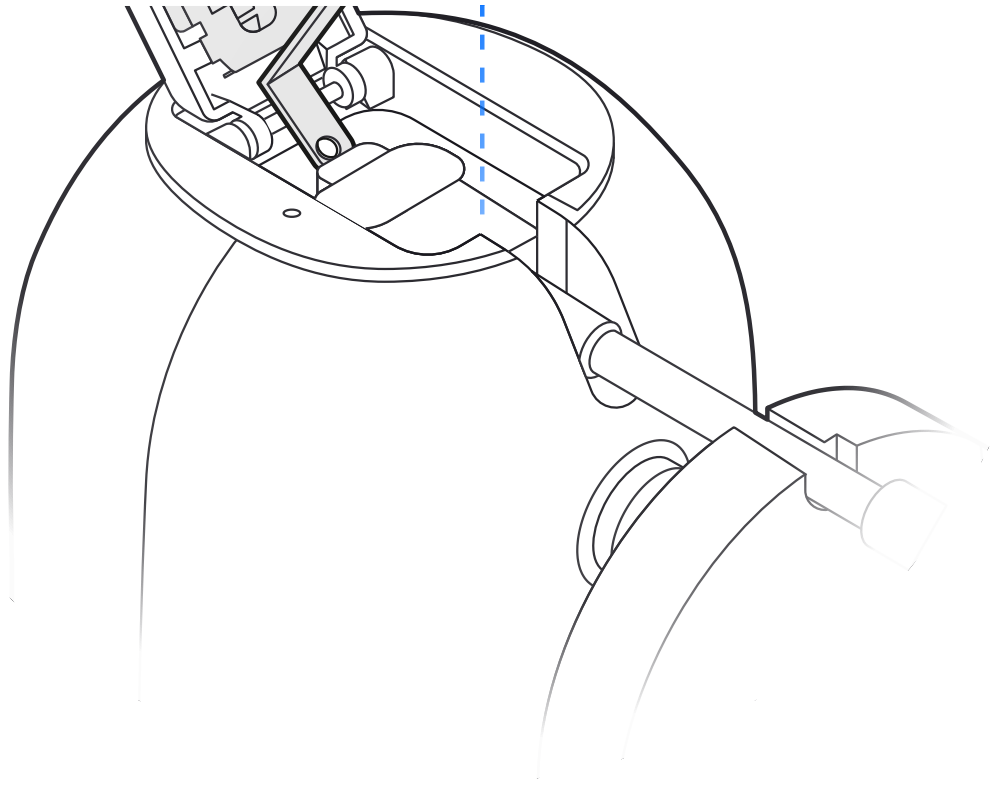 

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).